

X108 simple instructions

1, Multifunction Keys

[PRE] preamp on / off

[ATT] pre-fader on / off

[MODE] work mode selection, USB - LSB - CW - AM

[AGC] AGC on / rate selection

[NB] noise suppressor on / control the depth of selection



[A / B] VFOA / VFOB switch

[A = B] will be set consistent with VFOA VFOB of

[SPLT]-frequency transceiver mode on / off

[RIT] frequency tuning on / off

[POW] transmit power setting



[V / M] Frequency Mode / Channel mode switching

[M> V] will set the parameters given the current channel current frequency mode

[MW] The current frequency mode setting parameters are stored into the channel

[MC] clear the current channel settings

[BW] filter bandwidth selection



[KEY] CW telegraph key manual / automatic telegraph key mode selection

[KSPD] key rate is set automatically (after the speed must be set in order to use the automatic key function)

[TIME] clock settings

[SQL] squelch settings



2, the tail Interface Description

ANT: antenna interface

AUX: Extended Interface

SPK: External loudspeaker connector

KEYER: telegraph key interface

USB: USB interface

DC IN: DC voltage interface (10V ~ 14.5V)



Translated from original document by Import Communications

Import Communications is the sole North American importer
of the X108 transceiver. Dealer inquiries are welcome.

ImportCommunications.com